# **GP** E411 **USB Economy Charger**



### Instruction Manual

Unpacking and checking
Take the charger out of the packaging and make
sure your new charger and the USB charging
cable are undamaged and in good working order. You should find the following items in the packaging:











Charging instructions

### LED indication

 
Condition	LED indicator	
Charging in progress	Green (Flashing)	
Bad or single-use battery	Green (Rapid flashing)	
Charging completed	Green	

### Charging time\*

	Size	Capacity (mAh)	Charging time (hrs)
NiMH	AA	1300mAh - 2100mAh	5 - 8
	AAA	650mAh - 850mAh	2.5 - 3

160 mm

## 70mm



- 3. Connect the other end of the USB cable to a wall charger (Hg. 2b) or similar USB port on a computer, power bank or oar charger,
  4. Charging will commence and the LED indicator will show the status of the battery (Fig. 3). The LED indicator will show the flashing green color when the battery is charging. For bad or single-use battery, the rapid flashing green color will be shown in the LED indicator when charging.
- the rapio hashing green color will be shown in the LED intolator when charging.

  5. Once the battery is fully charged (LED constant green), remove the battery and disconnect the battery charger from the power supply.

  6. Charging first varies depending on battery capacities.

  For best performance and safety, always use GP NiMH batteries.

- 4 slots charging with 2 LED indication
   Auto cutoff Negative delta V & safety timer
- USB power Input (5V/1A)
   Trickle charge mode
   Approximate charging time (AA, 2100mAh / AAA, 850mAh): 8/3 hrs

- Approximate charging time (AA, 2 Nouman / AAA, southan), old ins
   It is normal for batteries to become hot during charging and they will gradually cool down to room temperature after fully charged.
   Remove batteries from the electrical device if the device is not going to be used for a long time.

- Remove batteries from the electrical device if the device is not going to be used for a long time.
   Battery storage temperature: 20 60°C
   Charger operation temperature: 0 33°C
   Safety information
   This charger is designed to charge only NIMH battery, Charging other batteries may lead to explosion, battery rubure or leakage, personal injury or property damage.
   This charger is designed for indoor use only, Do not expose the charger to rain, snow or direct sunlight.
   Make sure the charger is used between 0-33°C.
   To reduce the risk of injury, it is recommended that GP NIMH batteries are used.
   Do not use the charger in humid conditions.
   Do not use the charger in humid conditions.
   Do not use the charger after it has been dropped or damaged.
   Do not use the charger after it has been dropped or damaged.
   Do not use the charger.

- Do not open/disassemble the charger.

  This charger is maintenance-free but should be wiped clean regularly with a dry and soft cloth. Do not
- This charger is maintenance-free but should be wiped clean regularly with a dry and soft doth. Do not
  use abrasives or solvents. Unplug the charger before cleaning.
   This appliance can be used by children aged from 8 years and above and persons with reduced physical,
  sensory or mental capabilities or lack of experience and knowledge if they have been given supervision
  or instruction concerning use of the appliance in a safe way and understand the hazards involved.
   Cleaning and user maintenance shall not be made by children without supervision

The device complies with Part 15 of the FCC Rules. Operation is subject to the following law conditions: (1) this device may not cause harmful inferience, and (2) this device must accept any interference received, including interference that may cause undered operations.

Do not dispose of electrical applications what the presented exclination feelings control and purpose of electrical applications are disposed of in land falls or durings, hazardous substances can be considered in the groundward and great in the Section data, undersigning your health and we bed-sings.

## Перед использованием прочитайте инструкцию по эксплуатации и

перид использования ме для дальнейшего использования,

1. Вставате два или чельре акумулятора N&H в зарядное устройство в соответствии с обозначением полярности
акумуляторов (ркл. 1).

2. Подсоедините разъем micro USB кабеля к порту micro USB зарядного устройство (ркс. 2а).

RU

- Подголение при размен тиго USB забеем к полут илог USB заращего устройства (рк. 2a).
   Подголение прукой ожене USB-забеем к испетеном узаражему устройства.
   Подголение прукой ожене USB-забеем к испетеном узаражему устройства.
   Нементов зараже, и ожеготорожным переизото голожет состовнее батерее (Ркс. 3). Светодисирый наригатор будет и наментов и подражение преизона и преизона преизона и преизона и

- Аптоматического потпочение защита от режим годорожности (СПС) (С
- питания.
  З'По устройство может использоваться дельми от 8 лет и старше, в также подыми с отремненными физическими, сенсорными или умственными способностими или бас опыта и значий, только остил оне делагот это под наблюденеми или были подностружитеренные обезованеми использовании утройство и почимают стортутерущие риски.
  Дели не долиме нартать с устройством.
  Дели не долиме нартать с устройством.
- воростик.

  Ускройство колментация требования Часли 5 Правол РСС. Устройство может работать посте исполнения спадуации, условей; (1) устройство и может вызывать прасцем отполнения спадуации, условей; (1) устройство день почем от почем, кызыващим сбое зарботе, может вызывать прасцем отполнения ответся, вызыващим сбое зарботе, запачать почем отполнения отполнения от развем состемного объего отполнения от прасцем установления развем состемного отполнения от прасцем установления развем состемного объего отполнения от прасцем установления установления развем состемного ответство от предоставления от прасцем установления устано

